
OFFICE CHAIR

ASSEMBLY INSTRUCTION


▽ ASSEMBLY PROGRAM

STEP 1

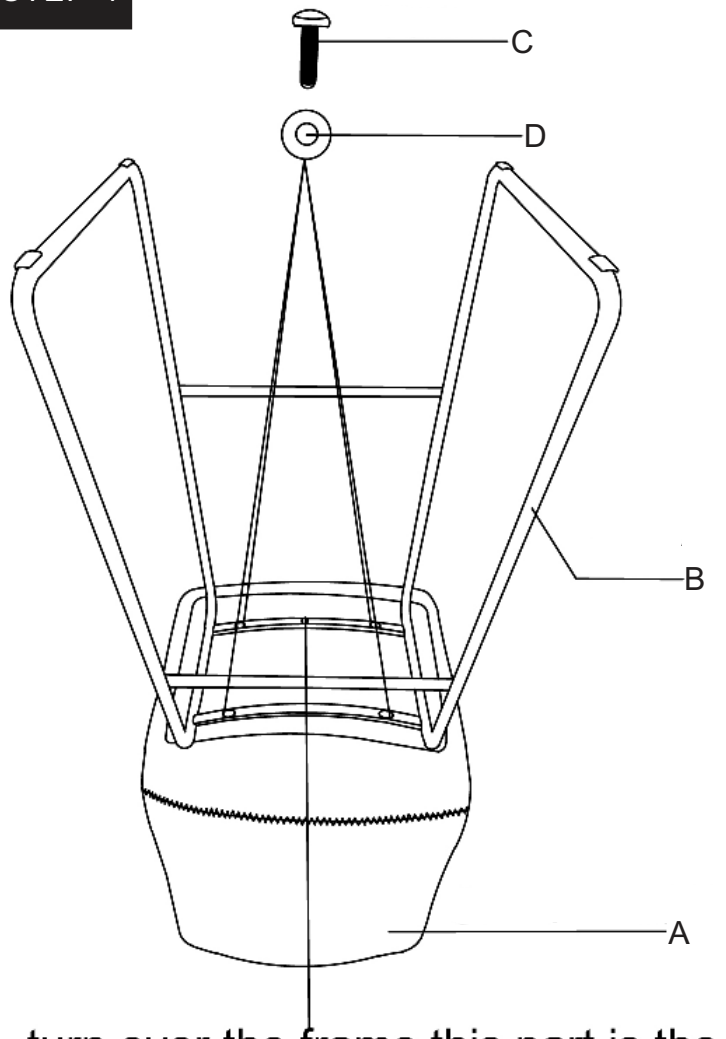


turn over the frame,this part is the front frame

FINISH

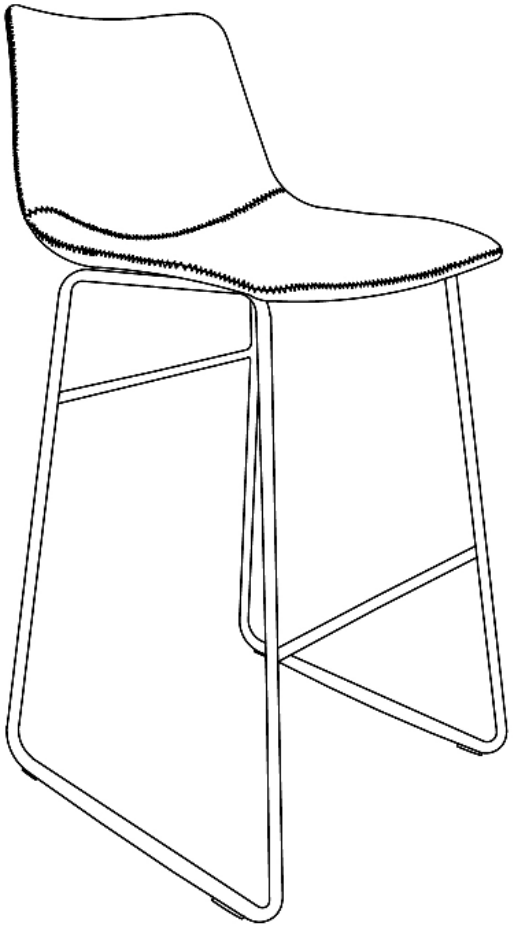

▽ PARTS x QTY

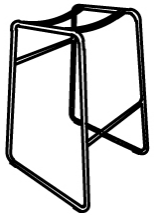A=Seat Group x1	C=Screw(M6X25mm) x4
	
B=Hob x1	D=Spacer(M6X18mm) x4
	
	E=Spanner
	